



## **Apex Destiny 6100** **MyAmbience Communication Setup Guide**

*Note: Please insure that system functions independently before connecting to MyAmbience*

Apex Destiny Security Systems use a location and value based programming method. This Guide will walk you through step by step in setting up your Apex system to talk to MyAmbience.

### **RS232 Interface Installation:**

For wiring information refer to the interface installation sheet provided with the module

### **Programming:**

All programming is done through the Apex keypad. From the System Ready Screen follow these keypad presses.

9173	(default programming code)
0155	(232 Programming location)
009	(Enable 232 and 2-way)
0409	(Disarm Event Location)
Value+16(def.144)	(Enable 232)
0410	(Disarm Event Location)
Value+16(def.144)	(Enable 232)
0411	(Arm Event)
Value+16(def.144)	(Enable 232)
0412	(Arm Event)
Value+16(def.144)	(Enable 232)
0430	(Zone Open Event)
Value+16(def.016)	(Enable 232)
0431	(Zone Restore Event)
Value+16(def.016)	(Enable 232)
9899	(Exit Programming Mode)