





CentraLite Elegance MyAmbience Communication Setup Guide

Note: Please insure that system functions independently before connecting to MyAmbience


Here are a few simple steps to ensure proper integration between MyAmbience and CentraLite Elegance systems.

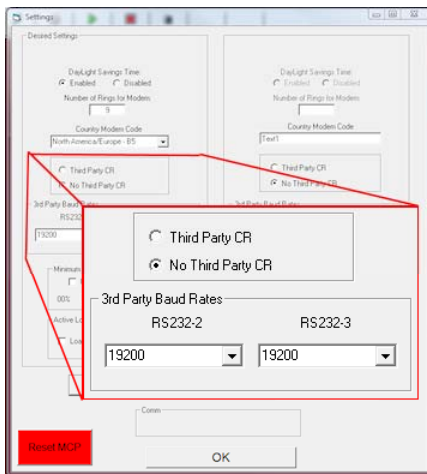

The first step is to configure proper serial port operation in the CentraLite programming software. Third Party CR should be enabled. And 3rd Party Baud Rates should be set to 19200.

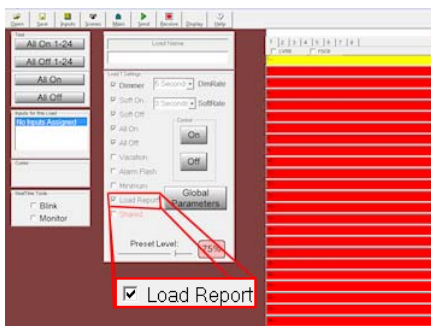

Enable “Load Report” for all loads.

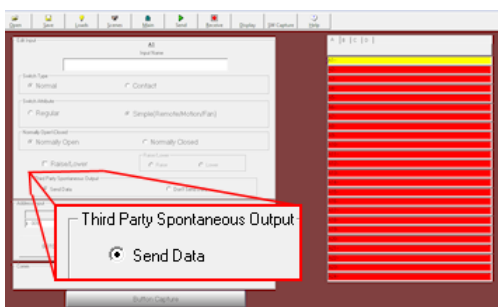

And Finally, Enable “Send Data” under Third Party Spontaneous Output for all inputs that you want MyAmbience to monitor.